

RELEASE NOTES

MC Next 2016 software

Version 10.0
October 2016

Office

MOUS Software B.V.
P.O. Box 42
NL 7040 AA 's-Heerenberg
The Netherlands
Phone: +31 (0) 314 665385
www.moussoftware.com

Release Notice

This is the October 2016 release of MC Next 2016
Release Notes.

Introduction

These Release Notes describe new features and improvements in the MC Next 2016 software.

New features and changes

- **Support Autodesk AutoCAD 2017** – This version includes support for the following AutoCAD products: AutoCAD 2017, AutoCAD LT 2017, AutoCAD Architecture 2017, AutoCAD MEP 2017, AutoCAD Civil 3D 2017 and AutoCAD Map 3D 2017.
- **Support Autodesk Revit 2017** – This version includes support for Revit 2017.
- **Support BricsCAD v17** – The software has been fully tested to work correctly with the BricsCAD v17 software.
- **Copy Special** – A new option Copy Special has been added in this version. You can now specify the format, decimal precision and put the selection on the clipboard in the MC Next software.
- **Edit Points** – The Edit Points wizard has been added to the MC Next BricsCAD plug-in for editing and managing field points.
- **Divide Boundary** – The calculate volume wizard has been improved by adding a new window to divide the boundary. Boundaries are defined as a series of lines connecting points from the database. Boundaries can now be divided by placing points along each boundary line by a maximum distance. The mutual segments made along each boundary line will not exceed the maximum distance, but may be smaller than the maximum distance specified. Points outside the boundary will not be added to the DTM.
- **Divide Breaklines** – The calculate volume wizard has been improved by adding a new window to divide breaklines. Breaklines are a series of lines that are known to have a constant grade. Breaklines can now be divided by placing points along each break line by a maximum distance. The mutual segments made along each break line will not exceed the maximum distance, but may be smaller than the maximum distance specified.
- **Help Library Update** – The MC Next Help Library has been updated with the latest Ribbon User Interface and new features in CAD and Revit.
- **Getting Started Guide Update** – The MC Next Getting Started Guide has been updated with the latest Ribbon User Interface and new features in CAD and Revit.

License Activation

When you launch MC Next for the first time, you will be asked to activate MC Next. Click Activate and enter your information in the required fields and then click submit. An email with the required activation key will be sent to your email address. Please check your email after pressing submit and enter the activation key to activate the software.

The MOST RECOMMENDED way to enter the activation key correctly is to copy it from the email message (using Ctrl+C or the clipboard) and then paste it into the Activation Key field (using Ctrl+V).

Technical support

If you have a problem and cannot find the information you need in the product documentation, please contact your local dealer. Alternatively, you can go to the Support area of the MOUS Software website (www.moussoftware.com). Select the product you need information on. Product updates, documentation, and any support issues are available for download.

If you need to contact MOUS Software, please email support@moussoftware.com

System Requirements

- **Operating system** – Microsoft® Windows® XP, Windows Vista, Windows 7, Windows 8 or Windows 10 (32- and 64-bit versions)
- **Privileges** – Administrative Privileges on the system
- **Processor** – Pentium Dual-core 1.80 GHz or better recommended
- **Random access memory (RAM)** – 1 GB or more recommended
- **Hard disk space available** – 250 MB of disk space required
- **Monitor** – 1024 x 768 or higher resolution with 256 or more colors (at 96 DPI)
- **I/O Ports** – USB 2.0